


# STICK SHIFT

## DISASSEMBLY

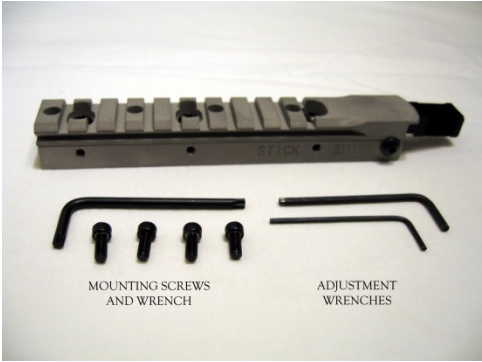


Stick Shift with wrenches and mounting screws.



Loosen three set screws on the side, 1-2 turns.




Remove three screws and nylon washers on top.

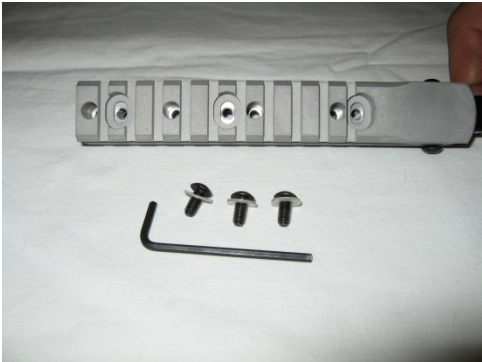


Three screws out.



Pull out shift lever and turn to one side. Slide knife blade between top and bottom.

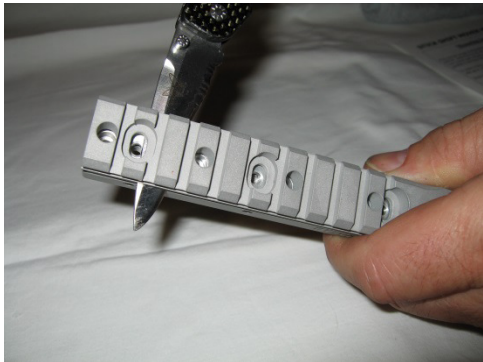


Bring knife toward rear and twist to pry apart.

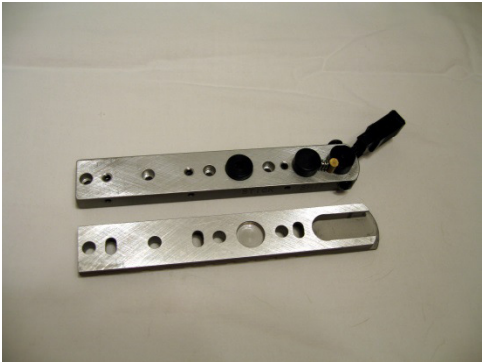

Top and bottom apart.



Shift mechanism removed.

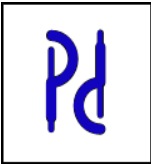

**PROTOCOL DESIGN, LLC**  
8317 Lewis Drive, Rear  
Lenexa, KS 66227  
(913) 422-8966 (service) (913) 730-0533 (sales)  
[sales@protocoldesign.com](mailto:sales@protocoldesign.com)  
[www.protocoldesign.com](http://www.protocoldesign.com)


## REASSEMBLY



Set parts back in place, as shown.



Turn both halves upside-down and compress spring until pivot can be pressed into mating hole. Make sure brass piece engages in mating notch.

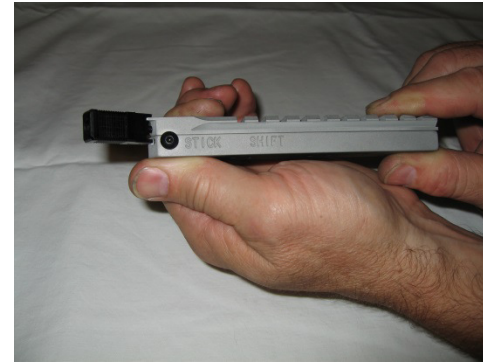

Press firmly together.



Replace three top screws with a washer under each screw.



Lightly tighten top screws, then back off each one 1/8 turn (45°). Top must be able to move freely, side to side.



Tighten three set screws.



Tighten two rear set screws.



It is not required to undo rear set screws to make adjustments for lead